

FANMASTER

WALL EXHAUST FAN

INSTRUCTION MANUAL

MODEL NO: IWLF6-11-6-3



**TO PREVENT SERIOUS INJURY, READ
AND UNDERSTAND ALL WARNINGS
AND INSTRUCTIONS BEFORE USE.**

CONTENTS


1. Safety notice	1
2. Note in use	2
3. Environment of use	2
4. Packing list	2
5. Specification	3
6. Installation	3
7. Troubleshoot	4
8. Warranty	5


1. Safety Notice


1. Do not put unnecessary things/objects into the air outlet as this will cause damage to the fan and could lead to injury.
2. Do not climb up or stack things on the unit. Do not let children or infirm persons near or operate the fan.
3. Do not place burning apparatus near the fan as it may cause carbon monoxide poisoning. Precautions must be taken to avoid the back-flow of gases into the open flue of gas or other fuel-burning appliances.
4. Do not attempt to make any modifications to or repair the product yourself. Have it installed or repaired by a qualified person only.
5. Do not install the unit where there is flammable and explosive gas.
6. This unit must have a reliable earth wire connection. If the earth wire is incorrectly connected it could cause an electric shock or fire.

2. Note in use

In order to prevent harm or damage to users and other people's personal safety and property, please make sure to comply with the following:

 This symbol, referring to please be careful - "to draw attention to"

 This symbol, referring to do not do - "banned"

 This symbol, referring to the need to implement - "mandatory"

Non-authorized or non-qualified personnel are not permitted to do repair or modification to this unit!



Could lead to product failure or injury

Do not use voltage expectant
AC380~420V \pm 10%!



Could cause a fire or electric shock

This machine should be used with single-phase two pole grounded electrical outlet and to ensure its reliable grounding! Grounding device is not installed, it could lead to airframe and other metal parts with electrostatic induction.



Could lead to product failure or leakage

3. Environment of use

1. Ambient temperature 25'C~45'C;
2. Environment relative humidity \leq 90%
3. Deviation of voltage cannot be more than \pm 10% of rated voltage
4. No flammable and explosive gas
5. No corrosive gases.

4. Packing list


Number	Description	Qty
1	Exhaust fan	1
2	Rain cover	1
3	Instruction manual	1

WALL EXHAUST FAN

5. Specifications

Model	IWLF6-11-6-3
Airflow	5000 L/S
Voltage/Frequency	380V/50Hz
Current	2.6A
Power	1.1KW
Motor IP	IP44
Fan Type	Axial
Dimension (mm)	830 x 770 x 410
Net weight	36KG
Noise	< 65dB

6. Installation & Dimensions

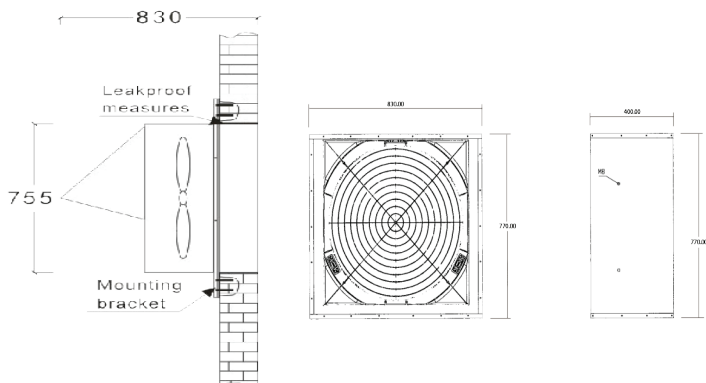

7. Troubleshoot

Failure phenomenon	Possible causes	Solution
Unable to turn on	<ol style="list-style-type: none">1. No Power connection2. Switch failure3. Phase failure4. Low voltage	<ol style="list-style-type: none">1. Check power supply2. Replace switch3. Check phase4. Check voltage
Excessive noise	<ol style="list-style-type: none">1. Fan blade dirty, deformed or damaged2. Motor wear3. There are sundries blocking the outlet	<ol style="list-style-type: none">1. Change fan blade or adjust bracket2. Replace motor3. Clear the sundries

8. Warranty

Any claim under this warranty must be made within 12 months of the date of purchase of the product. This warranty is limited to repair or replacement if found defective. Please note that our 12 month warranty does not extend to products which have been altered, abused, not used in an environment that the product was not designed to operate in or not used according to instructions. This includes unauthorised service or repair.

To make a claim under the warranty, take the product (with proof of purchase) to the store where you purchased the product or contact Fanmaster Pty Ltd. Fanmaster Pty Ltd will pay your reasonable, direct expenses of claiming under this warranty. You may submit details and proof of your expense claim to Fanmaster Pty Ltd for consideration.

This warranty is given by Fanmaster Pty Ltd
ABN: 45 353 934 457
Unit 1/6-8 Yalgar Rd, KIRRAWEE NSW 2232
P: 02 9524 9999
E: info@fanmaster.com.au

This warranty is provided in addition to other rights and remedies you have under law: Our goods come with guarantees which cannot be excluded under the Australian Consumer Law. You are entitled to replacement or refund for a major failure and to compensation for other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

WALL EXHAUST FAN

We reserve all rights of this manual. We reserve the right to change or modify this manual without prior notice.