


INSTRUCTION MANUAL



MASTERFILTER AIR SCRUBBER PURIFIER

MODEL: ASP-500-MF2

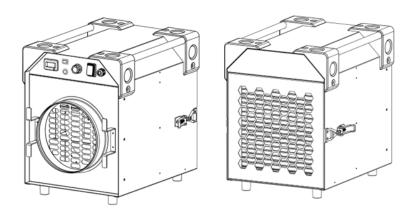

FOR YOUR INFORMATION

Thank you for purchasing a Fanmaster Masterfilter air scrubber purifier. Please read this instruction manual carefully before using this appliance.

Disclaimer:

Fanmaster reserves the right to make alterations to specifications, quantities, dimensions, for production or other reasons, subsequent to publication. While we believe the information is accurate and complete, we make no warranty or representation for any particular purposes. The information is offered in good faith and with the understanding that any use of the units or accessories in breach of the directions and warnings in this document is at the sole discretion and risk of the user.

Disposal Guidelines:

Do not dispose of this product with general household waste. This product must be disposed according to the laws governing Waste Electrical and Electronic Equipment. If required, contact your local authorities for information regarding the available disposal facilities.



1. GENERAL SAFETY RULES & WARNINGS





- PLEASE READ INSTRUCTIONS CAREFULLY.
- PLACE INSTRUCTION MANUAL IN A SAFE PLACE FOR FUTURE REFERENCE. DO NOT ALLOW
 ANYONE WHO HAS NOT READ THESE INSTRUCTIONS TO ASSEMBLE, ADJUST OR OPERATE THIS
 APPLIANCE.
- IF THE INFORMATION IN THIS MANUAL IS NOT FOLLOWED EXACTLY, A FIRE OR EXPLOSION
 MAY RESULT IN CAUSING PROPERTY DAMAGE, SERIOUS INJURY OR LOSS OF LIFE.
- FAILURE TO COMPLY WITH THE PRECAUTIONS AND INSTRUCTIONS PROVIDED WITH THIS
 APPLIANCE, CAN RESULT IN DEATH, SERIOUS INJURY AND PROPERTY LOSS OR DAMAGE FROM
 HAZARDS OF FIRE, EXPLOSION, BURN, ASPHYXIATION, AND/OR ELECTRICAL SHOCK.
- ONLY PERSONS WHO CAN UNDERSTAND AND FOLLOW THE INSTRUCTIONS SHOULD USE OR SERVICE THIS APPLIANCE. IF YOU NEED ASSISTANCE OR REQUIRE INFORMATION SUCH AS AN INSTRUCTION MANUAL, LABELS, ETC. CONTACT FANMASTER.
- DO NOT STORE OR USE GASOLINE, PETROL OR ANY OTHER FLAMMABLE OR COMBUSTIBLE VAPORS AND LIQUIDS IN THE VICINITY OF THIS APPLIANCE.
- THE ELECTRICAL SYSTEM TO WHICH THE APPLIANCE IS CONNECTED MUST COMPLY WITH LOCAL REGULATIONS. A RESIDUAL-CURRENT DEVICE (RCD) MUST BE INSTALLED.
- UNPLUG THE APPLIANCE BEFORE PERFORMING ANY MAINTENANCE OPERATIONS.
- ALWAYS CHECK THE POWER CABLE BEFORE USING THE APPLIANCE. IT MUST NOT BE BENT, TAUT, STRETCHED, CRUSHED OR ANY WAY DAMAGED.
- IF THE POWER CORD AND/OR PLUG IS DAMAGED, IT MUST BE REPLACED BY FANMASTER, A
 SERVICE AGENT OR A QUALIFIED PERSONS.
- DO NOT LEAVE THE APPLIANCE UNATTENDED WHEN IN USE.
- NEVER USE THE APPLIANCE WITH WET HANDS OR WHEN EITHER THE APPLIANCE OR THE POWER CABLE IS WET.
- CHILDREN SHOULD BE SUPERVISED TO ENSURE THAT THEY DO NOT PLAY WITH THE APPLIANCE.
- THE APPLIANCE IS NOT INTENDED FOR USE BY PERSONS (INCLUDING CHILDREN) WITH REDUCED PHYSICAL, SENSORY OR MENTAL CAPABILITIES, OR LOCK OF EXPERIENCE & KNOWLEDGE.
- PLEASE MAKE SURE ALL PLASTIC PACKAGING IS REMOVED FROM ALL FITLERS BEFORE OPERATION.
- THIS APPLIANCE CONTAINS A UV EMITTER. DO NOT STARE AT THE LIGHT SOURCE.
- DO NOT USE AN ADAPATER WITH THIS APPLIANCE.
- BREATHING HAZARD WHEN USING THIS APPLIANCE IN A CONTAINMENT AREA, ALWAYS
 TURN OFF POWER TO OPEN COMBUSTION APPLIANCES SUCH AS FIREPLACES, FURNACES,
 WATER HEATERS & HVAC SYSTEMS TO AVOID THE RISK OF BACK-FLOW CARBON MONOXIDE
 FUMES.
- IF THE FILTER CHANGE LIGHT ILLUMINATES DURING THE REMEDIATION PROCESS, IMMEDIATELY CHANGE THE HEPA/ACTIVATED CARBON FITLER.
- TIPPING HAZARD ONLY STACK THIS UNIT IN STORAGE, NOT IN USE. DO NOT STACK MORE THAN TWO (2) UNITS ON TOP OF EACH OTHER.
- THIS APPLIANCE IS NOT DESIGNED TO BE CONTINUOUSLY USED 24 HOURS 7 DAYS A WEEK AS
 IT WILL SHORTEN THE PRODUCT LIFE.

2. PRODUCT DESCRIPTION & SPECIFICATIONS

PRODUCT DESCRIPTION


Industrial air scrubber purifier designed to remove particles from the air and surrounding surfaces and odours.

SPECIFICATIONS


MODEL	ASP-500-MF2			
Air Flow (L/s) (CFM)	241			
Rated Power	0.21KW			
Voltage (V/Hz)	AC220-240V/50			
Current Rating (A)	0.87			
Plug Connection	3 Pin 10amp			
Cable Length (m)	5			
Filters	1st stage: G4 Pleated Disposable Cardboard Filter 2nd stage: H13 HEPA Filter UV-C Light Sterilisation			
Filter Size (mm)	Pre Filter: 290x290x22 H13: 280x280x105			
Fan Dia (mm)	220			
Air outlet Dia (mm)	197			
Filtered Aream (m2)	up to 40			
Fan Speed	Variable			
Hour Meter	Yes			
Filter Replacement/Clean Indicator Light	Yes			
Noise (dBa)	78			
Weight (kg)	15.5 / 17			
Product Dimensions (mm)	(W)438x(D)328x(H)412			
Packaged Dimensions (mm)	(W)505x(D)390x(H)465			

- When the unit total working time adds up to 2000 hours, the filter warning light will flash with an alarm on the control panel. (To reset the machine, push the UV-C light switch 3 times continuously in 5 seconds after Reset the filter service time)
- UV-C sterilization lamp fault detection function: when the UV-C sterilization lamp does not work, the alarm will keep ringing.

3. GETTING TO KNOW YOUR APPLIANCE

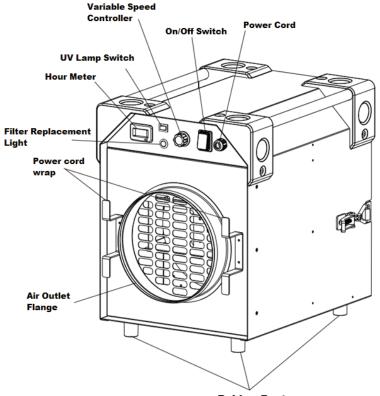

Rubber Feet

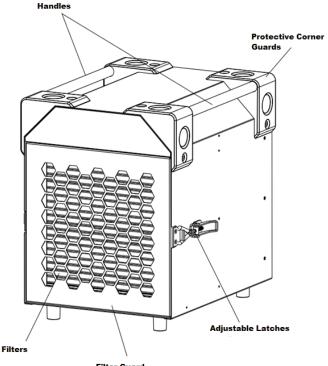

Filter Guard

4. HOW IT WORKS

The ASP-500-MF2 works by drawing the contaminated air into the air inlet which passes through a 2 stage filtration process that removes 99.97% of airbourne particles and is then sterlised with a UV-C Light.

The clean filtered air is then expelled back out via the air outlet. It removes dust particles and other airborne contaminants that carry mould spores, germs, viruses from the air and surrounding surfaces. The ASP-500-MF2 is fitted with a filter replacement indicator which will light up when the HEPA filter needs to be replaced.

Two (2) stage filtration & UV-C Light proces:

1st Stage: Pre-filter G4 Pleated Disposable Cardboard Filter - captures initial dust & allergen particles.

2nd Stage: H13 HEPA Filter - captures even smaller particles, up to 0.3 microns. Helps control and prevent the growth of bacteria and mould. Capturing 99.97% of dust & allergen particles.

UV-C Light: UV-C Light sterlises the filtered air. UV-C technology works by deactivating the DNA of mircoorganisms like bacteria & viruses disrupting their ability to multiply & spread.

5. USES & APPLICATIONS

USES

- Air purification
- Dust control
- Odour control
- Remediation & Restoration works (wate, fire & mould damage)

APPLICATIONS

- Constructions sites
- Offices
- Commerical hotels, kitchens
- Warehouses, workshops, factories
- Rental/Hire

6. ASSEMBLY & OPERATING INSTRUCTIONS

Remove the appliance from the carton. If the appliance is damaged, please contact Fanmaster or where you purchased the appliance from.

ASSEMBLY


There is minimal assembly required. **REMOVE PLASTIC PACKAGING FROM FILTERS** - open the cover via releasing the two (2) latches and remove the plastic packaging from all filters. Failure to do so will cause risks or damage to the appliance. The appliance will not work.

OPERATING INSTRUCTIONS

- 1. Place the appliance so that it is in an upright vertical position (placed on the rubber feet).
- 2. Connect the plug to the relevant power source.
- 3. Open the air inlet cover on the opposite side of the control panel (filters)
- 4. Turn the appliance on by turning the Variable Speed Control.
- 5. To turn appliance off turn the Variable Speed Control anti-clockwise.

CONTROL PANEL

Variable Speed Control - controls the air flow (clockwise to increase)
Hour Meter - indicates the running time of the unit
UVC On/Off - controls the UV-C Lamp
Change HEPA Filter - indicates when to replace/clean the HEPA Filter

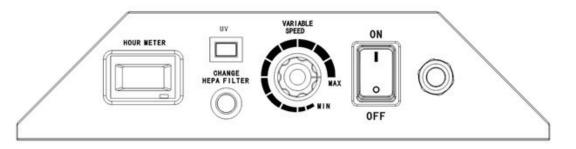

7. CLEANING, MAINTENANCE & STORAGE


- Before starting any maintenance task, shut down, unplug the appliance.
- Do not attempt any electrical repair yourself. If the appliance needs service or repair, contact a qualified person.
- When cleaning, make sure that water does not enter the unit.
- Do not open the enclosure to clean the inner parts. Do not spray water into the appliance.
- Never use solvents, gasoline, toluene and similar aggressive chemicals to clean the appliance.

Regularly wipe the enclosure using a soft sponge or cloth. For very dirty parts, use a sponge wetted with lukewarm water and a mild detergent, then dry using a clean cloth. Clean or replace the filters as required. Check the power cord and plug for any damages, if damaged replace the cord or plug immediately by a qualified person only.

STORAGE

- Clean the unit before storing for long periods of time.
- Keep stored inside.
- Maximum stack of 2 units.

8. WIRING DIAGRAM

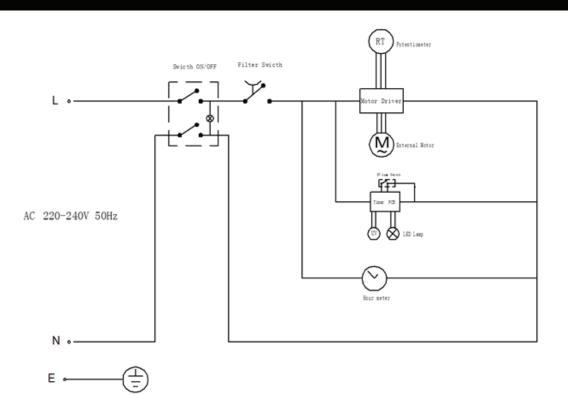

9. TROUBLESHOOTING

PROBLEM	CAUSE	SOLUTION	
No Power	Plug is loose or not connected correctly	Check plug connection	
	Faulty or damaged power cord	Check & replace	
No air flow	Filters are blocked	Replace filters	
	Air inlet or outlet is blocked	Check for bloackages	
UV-C Lamp not working	Drain pipe is clogged	Clean out drain pipe	
	Faulty	Replace	
	Not positioned correctly	Check placement	

- When the unit total working time adds up to 2000 hours, the filter warning light will flash with an alarm on the control panel. (To reset the machine, push the UV-C light switch 3 times continuously in 5 seconds after Reset the filter service time)
- UV-C sterilization lamp fault detection function: when the UV-C sterilization lamp does not work, the alarm will keep ringing.

10. WARRANTY

Any claim under this warranty must be made within 12 months of the date of purchase of the product. To make a claim under the warranty, take the product (with proof of purchase) to the store where you purchased the product or go to https://www.fanmaster.com.au/support.

This warranty is given by Fanmaster Pty Ltd

ABN: 45 353 934 457

Unit 1/6-8 Yalgar Rd, KIRRAWEE NSW 2232

P: 1300 900 345

E: support@fanmaster.com.au

This warranty is provided in addition to other rights and remedies you have under law: Our goods come with guarantees which cannot be excluded under the Australian Consumer Law. You are entitled to replacement or refund for a major failure and to compensation for other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Exclusions: This warranty does not cover:

- Any defects caused by an accident, misuse, abuse, improper installation or operation, lack of reasonable care, unauthorized modification, loss of parts, tampering or attempted repair by a person not authorized by the distributor.
- Any product that has not been installed, operated or maintained to a satisfactory level.
- Any damage caused by improper power input or improper cable connection.



Fanmaster Pty Ltd | 1/6-8 Yalgar Road, KIRRAWEE NSW 2232 1300 900 345 | sales@fanmaster.com.au | www.fanmaster.com.au

