




FANMASTER

COOLING HEATING VENTILATION EXTRACTION

INSTRUCTION MANUAL

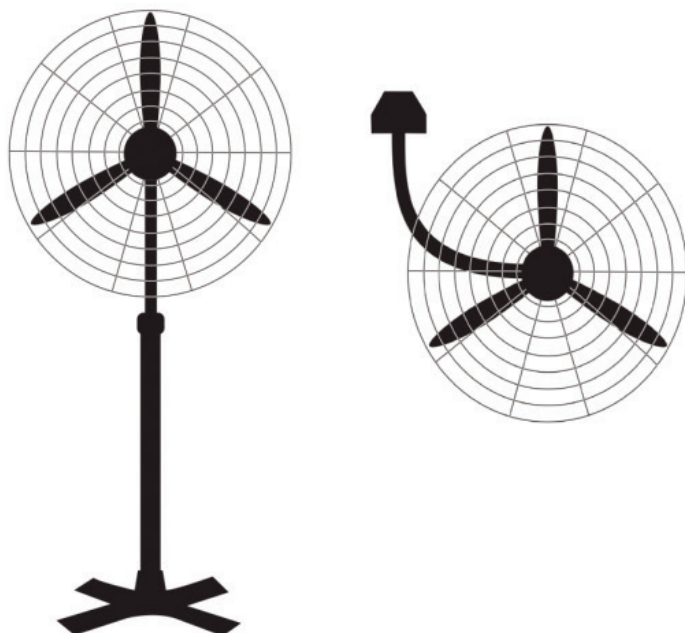

NF

PEDESTAL & WALL FAN

MODEL: NFPD75, NFWL75

1 YEAR WARRANTY

TO PREVENT SERIOUS INJURY, READ & UNDERSTAND ALL WARNINGS & INSTRUCTIONS BEFORE USE. PLEASE KEEP THIS DOCUMENT FOR YOUR RECORDS

FOR YOUR INFORMATION

Thank you for purchasing a Fanmaster National Fans (NF) Pedestal or Wall Fan. Please read this instruction manual carefully before using this appliance.

Disclaimer:

Fanmaster reserves the right to make alterations to specifications, quantities, dimensions, for production or other reasons, subsequent to publication.

While we believe the information is accurate and complete, we make no warranty or representation for any particular purposes. The information is offered in good faith and with the understanding that any use of the units or accessories in breach of the directions and warnings in this document is at the sole discretion and risk of the user

Disposal Guidelines:

Do not dispose of this product with general household waste. This product must be disposed according to the laws governing Waste Electrical and Electronic Equipment. If required, contact your local authorities for information regarding the available disposal facilities.



1. GENERAL SAFETY RULES & WARNINGS



- PLEASE READ INSTRUCTIONS CAREFULLY.
- PLACE INSTRUCTION MANUAL IN A SAFE PLACE FOR FUTURE REFERENCE. DO NOT ALLOW ANYONE WHO HAS NOT READ THESE INSTRUCTIONS TO ASSEMBLE, ADJUST OR OPERATE THIS APPLIANCE.
- IF THE INFORMATION IN THIS MANUAL IS NOT FOLLOWED EXACTLY, A FIRE OR EXPLOSION MAY RESULT IN CAUSING PROPERTY DAMAGE, SERIOUS INJURY OR LOSS OF LIFE.
- FAILURE TO COMPLY WITH THE PRECAUTIONS AND INSTRUCTIONS PROVIDED WITH THIS APPLIANCE, CAN RESULT IN DEATH, SERIOUS INJURY AND PROPERTY LOSS OR DAMAGE FROM HAZARDS OF FIRE, EXPLOSION, BURN, AND/OR ELECTRICAL SHOCK.
- ONLY PERSONS WHO CAN UNDERSTAND AND FOLLOW THE INSTRUCTIONS SHOULD USE OR SERVICE THIS APPLIANCE. IF YOU NEED ASSISTANCE OR REQUIRE INFORMATION SUCH AS AN INSTRUCTION MANUAL, LABELS, ETC. CONTACT FANMASTER.
- DO NOT STORE OR USE GASOLINE, PETROL OR ANY OTHER FLAMMABLE OR COMBUSTIBLE VAPORS AND LIQUIDS IN THE VICINITY OF THIS APPLIANCE.
- FIRE, BURN, INHALATION, AND EXPLOSION HAZARD. KEEP SOLID COMBUSTIBLES, SUCH AS BUILDING MATERIALS, PAPER OR CARDBOARD, A SAFE DISTANCE AWAY FROM THE APPLIANCE. NEVER USE THE APPLIANCE IN SPACES WHICH DO OR MAY CONTAIN VOLATILE OR AIRBORNE COMBUSTIBLES, OR PRODUCTS SUCH AS GASOLINE, SOLVENTS, PAINT THINNER, DUST PARTICLES OR UNKNOWN CHEMICALS.
- THE ELECTRICAL SYSTEM TO WHICH THE APPLIANCE IS CONNECTED MUST COMPLY WITH LOCAL REGULATIONS. A RESIDUAL-CURRENT DEVICE (RCD) MUST BE INSTALLED.
- UNPLUG THE APPLIANCE BEFORE PERFORMING ANY MAINTENANCE OPERATIONS.
- ALWAYS CHECK THE POWER CABLE BEFORE USING THE APPLIANCE. IT MUST NOT BE BENT, TAUT, STRETCHED, CRUSHED OR ANY WAY DAMAGED.
- IF THE POWER CORD AND/OR PLUG IS DAMAGED, IT MUST BE REPLACED BY FANMASTER, A SERVICE AGENT OR A QUALIFIED PERSONS.
- DO NOT COVER THE FAN GUARD OR MOTOR.
- DO NOT LEAVE THE APPLIANCE UNATTENDED WHEN IN USE.
- NEVER USE THE APPLIANCE WHEN EITHER THE APPLIANCE OR THE POWER CABLE IS WET.
- CHILDREN SHOULD BE SUPERVISED TO ENSURE THAT THEY DO NOT PLAY WITH THE APPLIANCE.
- THE APPLIANCE IS NOT INTENDED FOR USE BY PERSONS (INCLUDING CHILDREN) WITH REDUCED PHYSICAL, SENSORY OR MENTAL CAPABILITIES, OR LACK OF EXPERIENCE & KNOWLEDGE.
- DO NOT PUT OBJECTS INTO THE FAN GUARD & BLADE.
- DO NOT CLIMB OR STACK THINGS ON THE APPLIANCE.

2. PRODUCT DESCRIPTION & SPECIFICATIONS


PRODUCT DESCRIPTION

The Fanmaster National Fans (NF) are a high quality entry level pedestal and wall fan. It is excellent for circulating air in a wide variety of applications such as offices, lunchrooms, cafes, warehouse and factories.

SPECIFICATIONS


MODEL	NFPD75	NFWL75
Air Flow (L/s)	4800	4800
Diameter (mm)	750	750
Motor (K/W)	0.28	0.28
Voltage/Hz	240/50	240/50
Plug Connection	3 Pin 10a	3 Pin 10a
Fan Speed	3	3
Height Adjustment	Yes	No
Oscillation	Yes	Yes
Net Weight (kg)	23	15

3. GETTING TO KNOW YOUR FAN

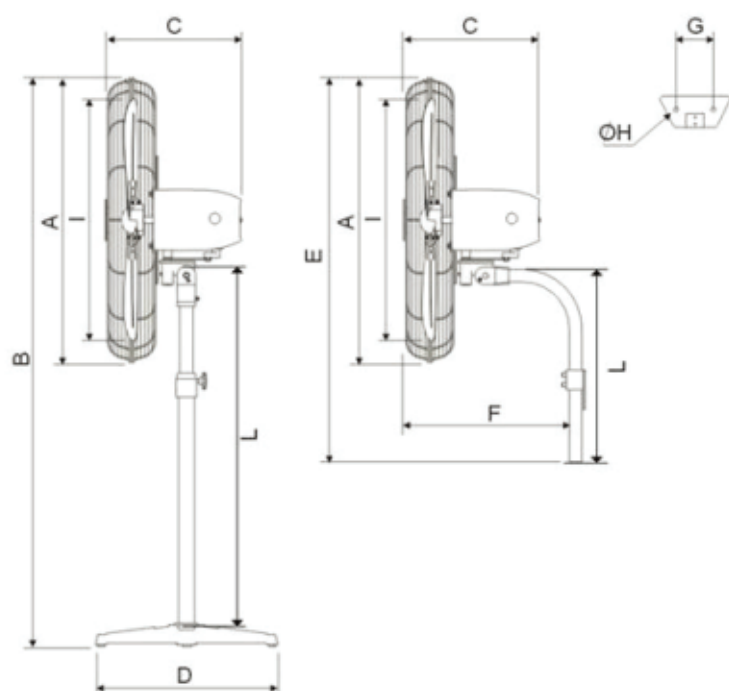


Item Model	A	B		C	E	F	G	H	L
		min	max						
NFPD75	810	1500	1900	305					1250
NFWL75	810			305	850	500	125	12.5	400

3. GETTING TO KNOW YOUR FAN

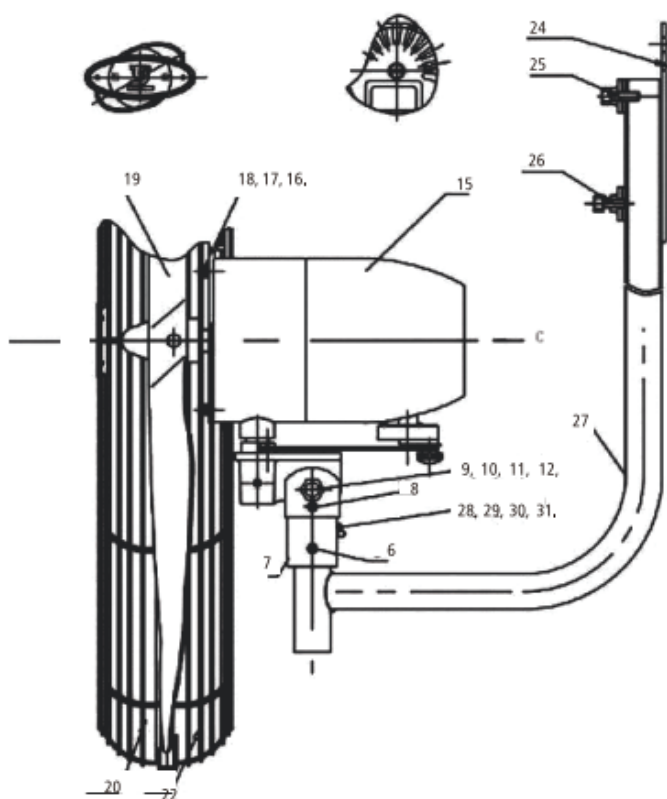

Serial No.	Item No.	Des.	QTY	Spec./Material	Remark
6	GB818-85	Cross screw	1	M6X12	Plate color zinc
7	FB.FB-65-040-040-000	Under connector	1	HT-100	Spray coating
8	GB818-85	Cross screw	1	M6X20	Plate color zinc
9	GB95-85	Washer	1	φ12	Plate color zinc
10	GB593-85	Spring washer	1	φ12	Plate color zinc
11	GB52-76	Hex nut	1	M12X40	Plate color zinc
12	GB30-76	Hex bolt	1	M12X40	Plate color zinc
15	FB.FB-65-011-000-010	Motor assembled indication	1		2M Cord
16	FS.FB-65-011-070-000	Fit washer	4	D15 d6.5 h1.5	Plate color zinc
17	GB593-85	Spring washer	4	φ6	Plate color zinc
18	GB818-85	Cross screw	4	M6X16	Plate color zinc
19	FS.FB-65-030-000-000	Fan blade	1		Spray coating
20	FS.FB-65-020-020-000	Front net	1		Spray coating
21	FS.FB-65-020-010-000	Back net	1		Spray coating
23	FS.FB-65-070-020-000	Rating label	1	Label	
24	FB-65-061-000-000	Hanger wall combination	1		Spray coating
25	GB30-76	Hex bolt	1	M8X25	Plate color zinc
26	GB30-76	Hex bolt	1	M8X20	Plate color zinc
27	FB-65-060-030-000	Hanger wall and elbow combination	1	§=1.2Xφ32/A3 High frequency tube	Spray coating
28	KDDT-360	Cable clamp	1	φ6/NYLON1010	
29	GB95-85	Washer	1	φ4	Plate color zinc
30	GB593-85	Spring washer	1	φ4	Plate color zinc
31	GB70-76	Semicircular screw	1	M4X8	Plate color zinc

3. GETTING TO KNOW YOUR FAN

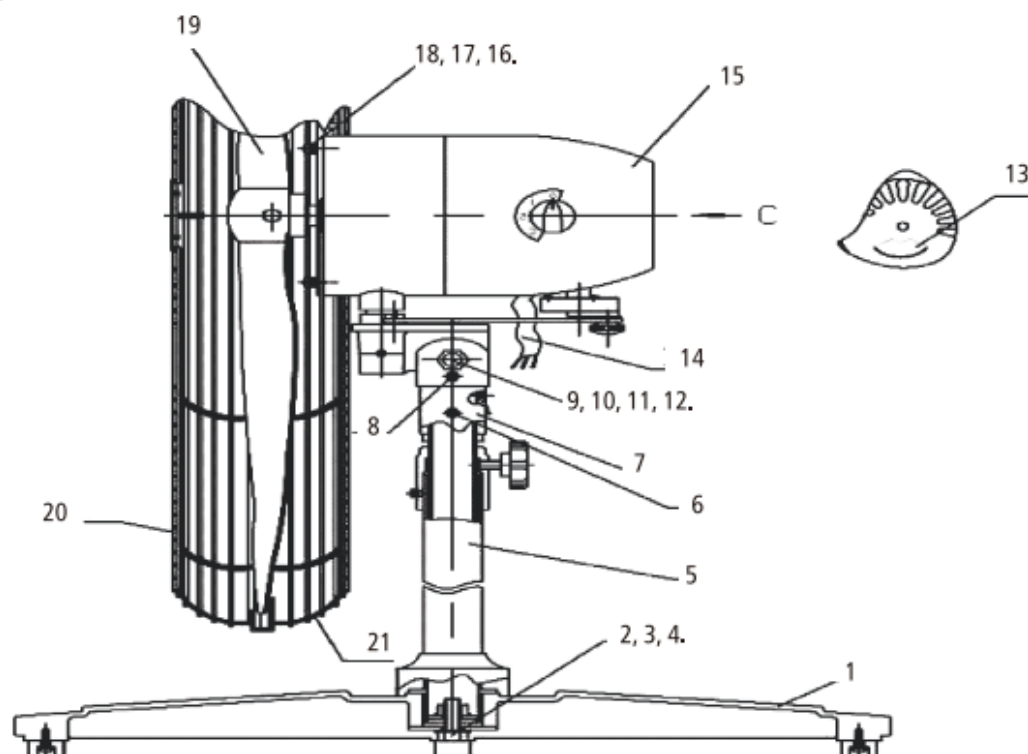


Serial No.	Item No.	Des.	QTY	Spec./Material	Remark
1	FS-75-050-000-000	Cross base	1	600/HT100	Spray coating
2	FS-75-040-030-000	Washer	1	D60 d12.5 s3	Plate color zinc
3	GB593-85	Spring washer	1	φ12	Plate color zinc
4	GB5780-86	Hex bolt	1	M12X40	Spray coating
5	FS-75-040-000-000	Supporting tube	1		Plate color zinc
6	GB818-85	Cross screw	1	M6X12	Spray coating
7	FS,FB-75-040-040-000	Under connector	1	HT-100	
8	GB818-85	Cross screw	1	M6X12	Plate color zinc
9	GB95-85	Washer	1	φ12	Plate color zinc
10	GB593-85	Spring washer	1	φ12	Plate color zinc
11	GB52-76	Hex nut	1	M12	Plate color zinc
12	GB30-76	Hex bolt	1	φ12X40	Plate color zinc
13	FS,FB-75-070-020-000	Rating label	1	Label	Plate color zinc
14		Power outlet	1	RVV 2X0.75+0.75M ²	Plate color zinc
15	FS,FB-75-011-000-010	Motor assembled indication	1		Plate color zinc
16	FS,FB-75-011-070-000	Fit washer	4	D15 d6.5 h1.5	2M Cord
17	GB593-85	Spring washer	4	φ6	Plate color zinc
18	GB818-85	Cross screw	4	M6X16	Plate color zinc
19	FS,FB-75-030-000-000	Fan blade	1	Aluminum	Plate color zinc
20	FS,FB-75-020-020-000	Front net	1		Spray coating
21	FS,FB-75-020-010-000	Back net	1		Spray coating
22	FS,FB-75-070-040-000	Net label	1	Aluminum	Spray coating

4. ASSEMBLING & OPERATING INSTRUCTIONS

Remove the appliance from the carton. If the appliance is damaged, please contact Fanmaster or where you purchased the appliance from.

Assembly Instructions

PEDESTAL FAN ASSEMBLY

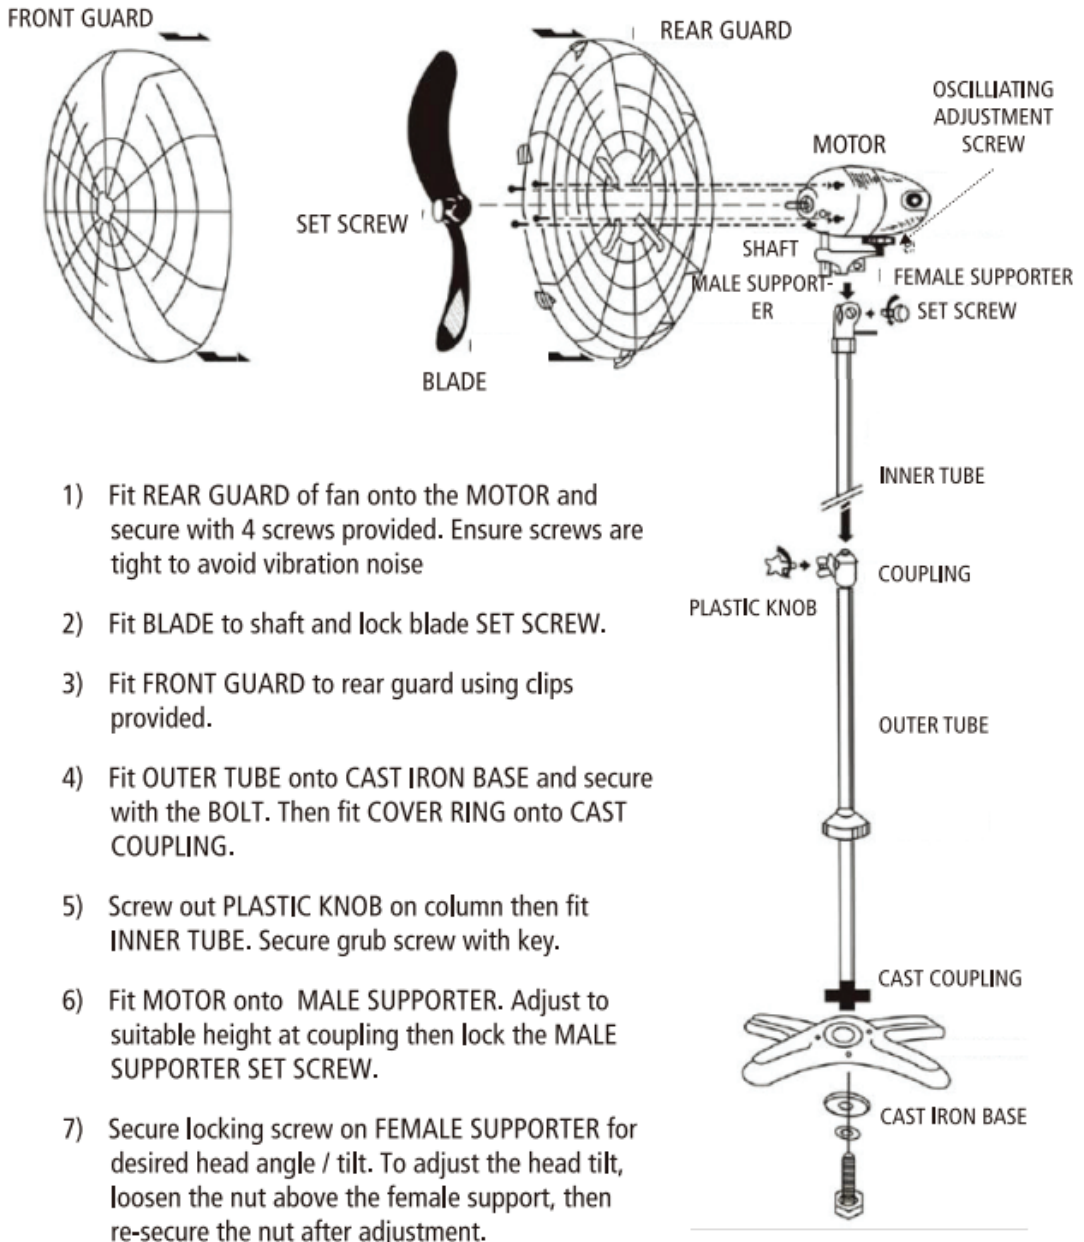

4. ASSEMBLING & OPERATING INSTRUCTIONS

WALL FAN ASSEMBLY


- 1) Complete points 1-3 on page 4.
- 2) Attach the wall mount base to the wall by drilling two holes with a M10*80 drill bit. Secure with the two M12 screws provided.

NOTE: Installation height should be a minimum of 2.5 metres from the ground.


IMPORTANT: Check wall is suitable for mounting and supporting the wall fan.

- 3) Insert the BEND TUBE through the two "U" shape slots provided in the wall mount base & lock them into position using the two screws provided.

NOTE: The Bend tube can be positioned either upwards or downwards. You must orient female support upward by removing the screw, repositioning & resecuring. Never attach the fan so it is hanging below the female supporter.

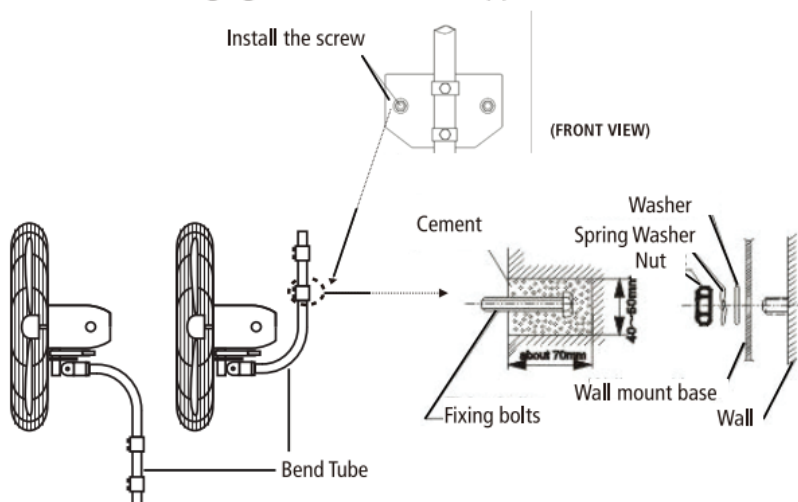

- 4) Insert the motor into the female support and secure with the screw.

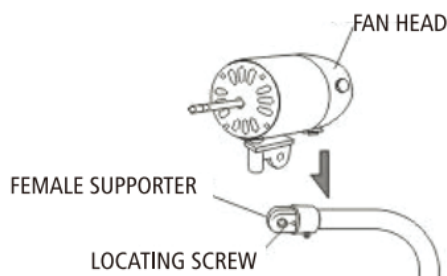

- 5) Secure locking screw on FEMALE SUPPORTER for desired head angle / tilt. To adjust the head tilt, loosen the nut above the female support, then re-secure the nut after adjustment.

WARNING! Make sure all parts are assembled correctly and connections are tight. **WARNING!** If supply cable is too tight the oscillating motion can cause damage - ensure sufficient section of cable to avoid damage.

4. ASSEMBLING & OPERATING INSTRUCTIONS

Operating Instructions

1. Place the fan on an even surface.
2. Connect the plug to the relevant power source.
3. The fan is not suitable in environments that is too moist or corrosive.
4. The fan has 3 speeds which can be changed by rotating the speed control switch. The numbers 0, 1, 2 and 3: 0 = OFF, 1 = Slow, 2 = Medium, 3 = Fast speeds.
5. For fixed air flow ensure the swing arm is not connected to the fan motor.
6. For oscillating air flow ensure the swing arm is connected to the fan motor by rotating the oscillating adjustment screw in an anti-clockwise direction.

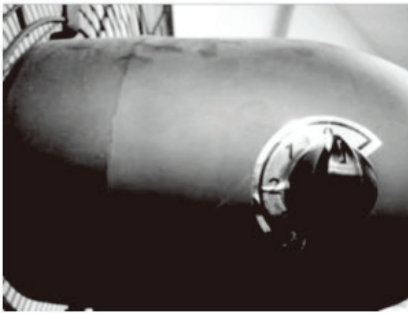


FIG 1 – The fan switch on the OFF position

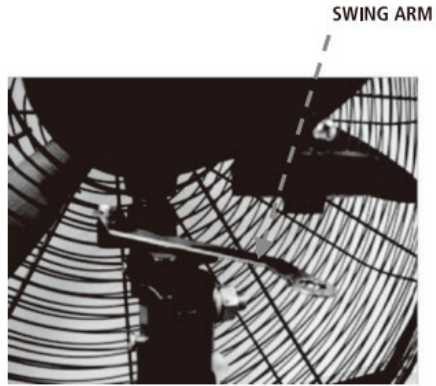


FIG 2 – The fan head in the FIXED air flow position

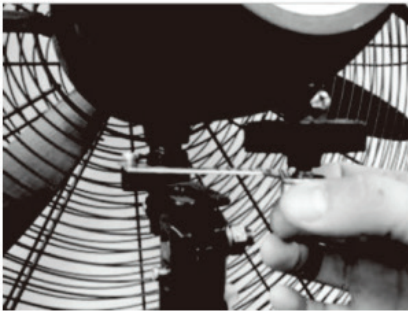


FIG 3 – For an OSCILLATING fan head, turn the OSCILLATING ADJUSTMENT screw anticlockwise to attach SWING ARM to fan head



FIG 4 – The fan head in the OSCILLATION position. Oscillation is 0-90°.


Environment of Use

1. The max relative humidity is 90% (when in 25°C).
2. Below 1000 metres altitude.

Maintenance

1. To ensure prolonged safe use ensure you have this unit inspected, cleaned & moving parts lubricated by a qualified person after every 1000 hours of use.
2. Regularly inspect the cord & plug & do not use if damaged. A license electrician is required to repair or replace the cord & plug.
3. Any other repairs or maintenance must be performed by a qualified person.

5. WIRING DIAGRAM

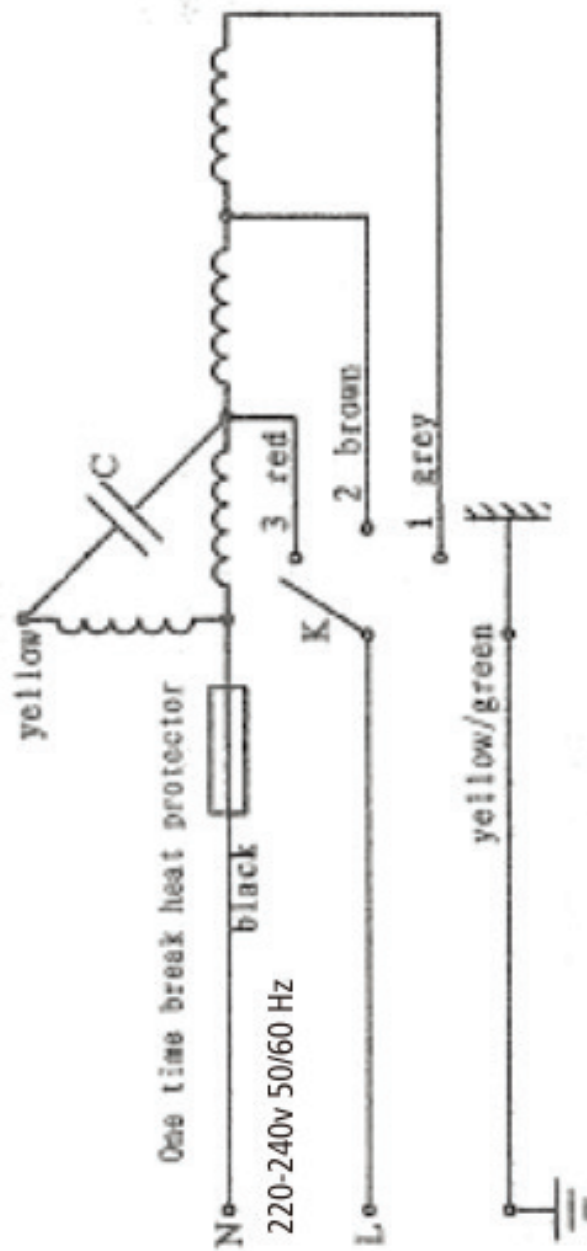

6. WARRANTY

Any claim under this warranty must be made within 12 months of the date of purchase of the product. To make a claim under the warranty, take the product (with proof of purchase) to the store where you purchased the product or go to <https://www.fanmaster.com.au/support>.

This warranty is given by Fanmaster Pty Ltd
ABN: 45 353 934 457
Unit 1/6-8 Yalgar Rd, KIRRAWEE NSW 2232
P: 1300 900 345
E: support@fanmaster.com.au

This warranty is provided in addition to other rights and remedies you have under law: Our goods come with guarantees which cannot be excluded under the Australian Consumer Law. You are entitled to replacement or refund for a major failure and to compensation for other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Exclusions: This warranty does not cover:

- Any defects caused by an accident, misuse, abuse, improper installation or operation, lack of reasonable care, unauthorized modification, loss of parts, tampering or attempted repair by a person not authorized by the distributor.
- Any product that has not been installed, operated or maintained to a satisfactory level.
- Any damage caused by improper power input or improper cable connection.

7. WARRANTY VALIDATION

Register Your Product

> **Warranty Management**

Validate your warranty, and receive notification 14 days prior to expiration.

> **Warranty Extension Available**

Add extended warranty to give you peace of mind.

> **Product Updates**

Latest news and updates on Fanmaster products.



REGISTER

www.fanmaster.com.au/warranty-registration



Fanmaster Pty Ltd | 1/6-8 Yalgar Road, KIRRAWEE NSW 2232
1300 900 345 | sales@fanmaster.com.au | www.fanmaster.com.au



N11664
MADE IN CHINA