



FANMASTER

COOLING HEATING VENTILATION EXTRACTION

INDUSTRIAL ULV FOGGER SANITISER

INSTRUCTION MANUAL

MODEL: ULVFOG-45 (UF-0045L)



**TO PREVENT SERIOUS INJURY, READ
AND UNDERSTAND ALL WARNINGS
AND INSTRUCTIONS BEFORE USE.**

READ & SAVE THESE INSTRUCTIONS

The Fanmaster ULV Fogger Sanitiser (Ultra Low Volume) is a compact and powerful fogging machine proving 1400 watts of power and with a 4.5L tank capacity. It is designed to handle both oil and water based chemical solutions and can be used in a variety of applications such as, used to sterilise and or disinfect the workplace, used for applying pesticides, herbicides, fungicides, sterilisers, and disinfectant.

- Adjustable Atomisation
- Effective range up to 10m
- Light weight ergonomic design
- Compact & Powerful
- Handles both oil & water based chemical solutions
- Ultra low volume

SAFETY INSTRUCTIONS

Ensure you are wearing the correct Personal Protective Equipment (PPE) when spraying such as masks, goggles, gloves, earmuffs.

Always operate the product from a power source of the same voltage, frequency and rating as indicated on the product identification plate.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Close supervision is necessary when used near children or infirm persons. Do not allow children to use it.

Do not operate any product with a damaged cord or plug, after the product malfunctions, is dropped or appears damaged in any way. Return the complete product to the place of purchase for inspection, repair or replacement.

To reduce the risk of electric shock, do not immerse or expose the product or flexible cord to rain, moisture or any liquid.

This product should not be used in the immediate vicinity of water, such as sinks, bathtub, washbowls, swimming pool etc. where the likelihood of immersion or splashing could occur.

Always disconnect the fogger when moving it from one location to another.

Never attempt to make any modifications to or repair the product yourself. Have it repaired by a qualified person only.

Manufacturer takes no responsibility for any damage caused by incorrect use.

SPECIFICATIONS

Part No.	ULVFOG-45 / UF-0045L
Power	1400W
Voltage	220-240V
Plug	3 Pin 10A
Tank Size	4.5L
Lead Length	5m
Atomisation	150-260ml/min (adjustable)
Particle Size	10-150 μ m
Effective Range	5-10m
Chemical Solution	Oil or Water based
dBa	<75.8
Dimensions	430x270x390mm
Weight	3.5kg
Material	PP corrosion resistant plastic



OPERATION & USE

Do not operate the Fogger for more than 20 minutes at a time.

Make sure the appliance is turned off and not connected to the power supply before adding the solution.

Please ensure you are wearing the correct Personal Protective Equipment (PPE) when spraying such as masks, goggles, gloves



1. Add solution (water or oil based) by unscrewing the cap off the tank and pouring solution into the tank. Screw the cap back on and ensure it is sealed correctly.

Check the solutions manufactures instruction in terms of portion/mixture control.

2. Set the adjustable misting knob to Max, once turned on adjust accordingly.

3. Connect to the power supply.

4. Turn on the switch **■**. (to turn off **○**)

5. For Sanitisation:

During the spraying operation, the operators walking speed should be stable, do not run. Slow control is required when spraying side to side or up and down. Do not spray people or animals. Stand back 1.5m when spraying near appliances and do not point and hold directly at appliances.

After use:

Any remaining solution should be poured out and disposed of correctly. Add water and spray for 2-3 minutes until clean. Store away.

Troubleshooting:

If not spraying first check the cap on the tank is correctly sealed. Check if lines are blocked, if so remove and clean.

WARRANTY

Any claim under this warranty must be made within 12 months of the date of purchase of the product. To make a claim under the warranty, take the product (with proof of purchase) to the store where you purchased the product or contact Fanmaster Pty Ltd.

Fanmaster Pty Ltd will pay your reasonable, direct expenses of claiming under this warranty. You may submit details and proof of your expense claim to Fanmaster Pty Ltd for consideration.

This warranty is given by Fanmaster Pty Ltd

ABN: 45 353 934 457

Unit 1/6-8 Yalgar Rd, KIRRAWEE NSW 2232

P: 1300 900 345

E: warranties@fanmaster.com.au

This warranty is provided in addition to other rights and remedies you have under law: Our goods come with guarantees which cannot be excluded under the Australian Consumer Law. You are entitled to replacement or refund for a major failure and to compensation for other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Exclusions: This warranty does not cover:

- Any defects caused by an accident, misuse, abuse, improper installation or operation, lack of reasonable care, unauthorized modification, loss of parts, tampering or attempted repair by a person not authorized by the distributor.
- Any product that has not been installed, operated or maintained to a satisfactory level.
- Any damage caused by improper power input or improper cable connection.

To make a claim please visit <https://www.fanmaster.com.au/warranty-claims-returns/>

