

How to maintain your evaporative cooler?

PACISD/PACIMD

Maintenance Schedule

TYPE		FREQUENCY
Changing the water	Weekly	1
Cleaning the tank	Monthly	1
Cleaning the filter screen (black)	Monthly	1
Cleaning the cooling pads	Quarterly	1

*Please note in more dusty environments the above schedule may need to occur on a more frequent basis.


Cleaning the Cooling Pads and Filter Screens

Please ensure the unit is turned off and unplugged from the power source.


1. Remove the filter screens from the air inlet louvres - 2 on each louvre (8 screen filters)
2. Use a screwdriver (philips head) to unscrew the screws from each louvre.
3. Using a brush, lightly dust the screen filters & wash it down with a hose.
4. Hold the cooling pad (air inlet louvres) & wash it down with a hose.

Do not use a high pressure water hose as it may cause damage to the cooling pads
Do not use detergents or soap to clean the cooling pads

Filter Screens

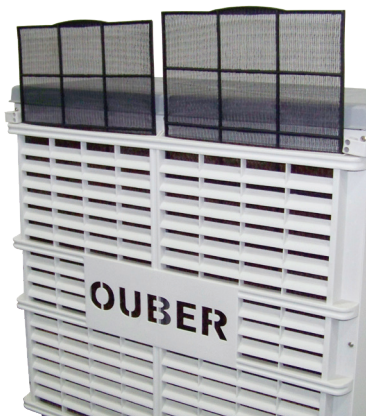

Air Inlet Louvre
with cooling pad

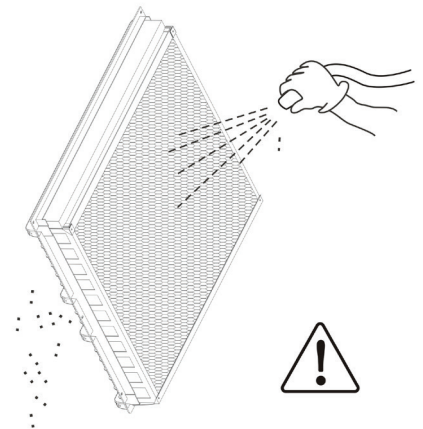

Cleaning the Water Tank

Please ensure the unit is turned off and unplugged from the power source.

1. Drain the water by releasing the drainage valve at the bottom of the unit.
2. Remove one air inlet louvre by using a screwdriver (philips head) to unscrew the 6 screws.
3. Rinse the inside of the tank with a hose and wipe it down with a cloth.

Do not use a high pressure water hose



Clean inside of
water tank

General maintenance

Please ensure the unit is turned off and unplugged from the power source.

1. Regularly check the power lead & plug for any damages. If damaged contact Fanmaster.
2. Regularly check the castors are functioning correctly.
3. Wipe down the outside of the unit with a dry cloth.

DO NOT ATTEMPT TO DO ANY ELECTRICAL WORKS.